

18. Appendix B - Mode Table

SYSTEM EVENT	CONSOLE OPERATING MODE								
	HOME MODE			AWAY MODE (Overrides Night Mode)			NIGHT MODE		
	Reports to Central Station	Voice Announcement	Starts 2-Way Audio	Reports to Central Station	Voice Announcement	Starts 2-Way Audio	Reports to Central Station	Voice Announcement	Starts 2-Way Audio
Fire & CO Alarms	✓ Yes	✓ Yes	~ If Enabled ^[6]	✓ Yes	✓ Yes	~ If Enabled ^[6]	✓ Yes	✓ Yes	~ If Enabled ^[6]
Fire & CO Supervisory Timeout ^[2]	✓ Yes	~ If Enabled ^[8]	N/A	✓ Yes	✗ No	N/A	✓ Yes	✗ No	N/A
Fire & CO Sensor Low Battery ^[2]	✓ Yes	~ If Enabled ^[8]	N/A	✓ Yes	✗ No	N/A	✓ Yes	✗ No	N/A
Console (HELP button) Alarm	✓ Yes	✓ Yes	~ If Enabled	✓ Yes	✓ Yes	~ If Enabled	✓ Yes	✓ Yes	~ If Enabled
Emergency Sensor Alarm	✓ Yes	✓ Yes	~ If Enabled ^[6]	✓ Yes	✓ Yes	~ If Enabled ^[6]	✓ Yes	✓ Yes	~ If Enabled ^[6]
Emergency Sensor Supervisory Timeout ^[2]	~ If Enabled	~ If Enabled ^[8]	N/A	✗ No ^[1]	✗ No ^[1]	N/A	~ If Enabled	✗ No	✗ No
Emergency Sensor Low Battery ^[2]	✓ Yes	~ If Enabled ^[8]	N/A	✓ Yes	✗ No ^[1]	N/A	✓ Yes	✗ No	N/A
Console Trouble ^{[2] & [5]}	✓ Yes	~ If Enabled ^{[8] & [9]}	N/A	✓ Yes	✗ No	N/A	✓ Yes	✗ No	N/A
Communication Status (telephone/cell)	✗ No	✓ Yes	N/A	✗ No	✓ Yes	N/A	✗ No	✗ No	N/A
Module Status	N/A	✓ Yes	N/A	N/A	✗ No	N/A	N/A	✗ No	N/A
Activity Monitor	✓ Yes	✓ Yes	~ If Enabled ^[7]	✗ No	✗ No	✗ No	✓ Yes	✓ Yes	~ If Enabled ^[7]
Temperature Alarms	~ If Enabled ^[4]	~ If Enabled ^[4]	~ If Enabled ^[4]	~ If Enabled ^[3]	~ If Enabled ^[3]	~ If Enabled ^[3]	~ If Enabled ^[3]	~ If Enabled ^[3]	~ If Enabled ^[3]
Missed Reminder Messages	✓ Yes ^[11]	✓ Yes	~ If Enabled	✗ No	✗ No	✗ No	✓ Yes ^[11]	✓ Yes	~ If Enabled
Entering Mode	✓ Yes	From Away Mode Only ^[10]	N/A	✓ Yes	✓ Yes	N/A	From Away Mode Only	From Away Mode Only	N/A

Mode Table Notes:

- [1] Setting the Console in Away Mode clears all supervisory events for emergency sensors only. Supervisory timers for Smoke detectors, CO detectors, and activity monitor sensors are not affected; switching to Home or Away Mode constitutes activity.
- [2] Supervisory events are reported by automatic status reports regardless of the global **REPORT SUPERVISORY EVENTS** setting. Also, AC power loss events are reported by automatic status reports regardless of the global **REPORT AC FAIL** setting. Both settings are on the Reporting Options tab.
- [3] If **ENABLE HOME MODE ONLY** is selected for **TEMPERATURE LIMIT SETTINGS** on the Console tab, temperature alarms will not occur in this mode. Select **ENABLE** to allow temperature alarms in this mode.
- [4] Either **ENABLE** or **ENABLE HOME MODE ONLY** needs to be selected on the Console tab for **TEMPERATURE LIMIT SETTINGS** to allow temperature alarms.
- [5] Console supervisory faults are always reported, but not annunciated in Away Mode and Night Mode.
- [6] To start a two-way audio session after a report is triggered by an emergency alarm sensor, two-way audio must be globally enabled in **TWO-WAY AUDIO MODE** on the Reporting Options tab and enabled for the sensor's zone with the **TWO-WAY AUDIO** check box on the Sensors tab.
- [7] For activity sensors, two-way audio is enabled globally in **TWO-WAY AUDIO MODE** on the Reporting Options tab regardless of the activity sensor's zone setting with the **TWO-WAY AUDIO** check box on the Sensors tab.
- [8] To enable Console/sensor zone low battery and sensor zone supervision annunciations, **ANNUNCIATE TROUBLE INDICATION** must be selected on the Console tab.
- [9] To announce telephone line and AC power status, **ANNUNCIATE PHONE-LINE/AC STATUS** must be selected on the Console tab.
- [10] The Console will only announce Home Mode when manually switched from Away Mode using the **HOME** button.
- [11] To report missed reminder messages, the global **REPORT MISSED REMINDER** option must be selected on the Reminder Messages tab and the reminder message slot must have the **SEND REPORT** option selected.